



iRZ MC55iT
GPRS class 10
GSM modem

USER MANUAL

Contents

| | | |
|------|--|----|
| 1. | Safety Requirements | 3 |
| 2. | General Information | 4 |
| 2.1. | Purpose of the Device | 4 |
| 3.1. | Configuration..... | 4 |
| 3.2. | Parameters | 4 |
| 3.3. | Exterior Appearance..... | 6 |
| 3.4. | Interfaces | 7 |
| 3.5. | Modem Status Indication..... | 10 |
| 3. | Connection and Setting Up..... | 11 |
| 3.1. | Connection..... | 11 |
| 3.2. | Control, Restarting and Power Off..... | 11 |

1. Safety Requirements

Restrictions for the usage of the device in the vicinity of other electronic devices:

- turn off the modem in hospitals or in the vicinity of medical equipment (e.g. cardiostimulators, hearing aids). It can cause interference for medical equipment;
- turn off the modem in aircrafts. Take measures against accidental activation;
- turn off the modem in the vicinity of gas-filling stations, chemical enterprises, blasting work places. It can cause interference to technical devices;
- at a short range the modem may cause harmful interference to TV and radio receivers.

Prevent the modem from dust and moisture.

Improper use deprives you of all warranty claims.

2. General Information

2.1. Purpose of the Device

The modem iRZ MC55iT is a structurally accomplished GSM modem designed for reception and transmission of data, text messages and teletypes. It is excellently adjusted both for mobile Internet Access and for industrial applications — telemetry, wireless data collection from sensors, remote surveillance, monitoring and signaling.

The modem is assembled based on the GSM module MC55i Cinterion. The control is performed by means of standard AT commands. The modem is equipped with light-emitting diodes (LEDs) enabling to monitor the status of connection.

3.1. Configuration

Complete set of the GSM modem IRZ MC55iT:

- modem iRZ MC55iT,
- label,
- factory box.

3.2. Parameters

Basic parameters:

- frequency ranges: GSM 850/900/1800/1900 MHz;
- power output:
 - 2W (class 4 for EGSM900),
 - 1W (class 1 for GSM1800),
- GPRS class 10;
- TCP/IP suit available through AT commands;
- MC class B;
- CSD up to 14.4 kbps;
- USSD;
- SMS;
- voice transmission;
- fax group 3: class 1.

Electric power supply:

- power supply voltage from 9 to 25 V;
- absorbed current not more than:
 - with power supply voltage +12 V – 200mA;
 - with power supply voltage +24 V – 100mA.

Physical parameters:

- size not more than 69x74x33 mm,
- weight not more than 100 g.,
- operating-temperature range from -20°C to +65°C,
- storage temperature range from -40°C to +85°C.

Interfaces:

- connector RJ11 for power supply connection,
- connector RJ11 for audio interface connection,
- connector DB9 for connection of the data cable RS-232,
- connector FME for GSM antenna connection.

3.3. Exterior Appearance

The modem MC55iT is a compact device completed in a plastic housing. The external appearance is represented on Fig.2.4.1 and Fig.2.4.2.

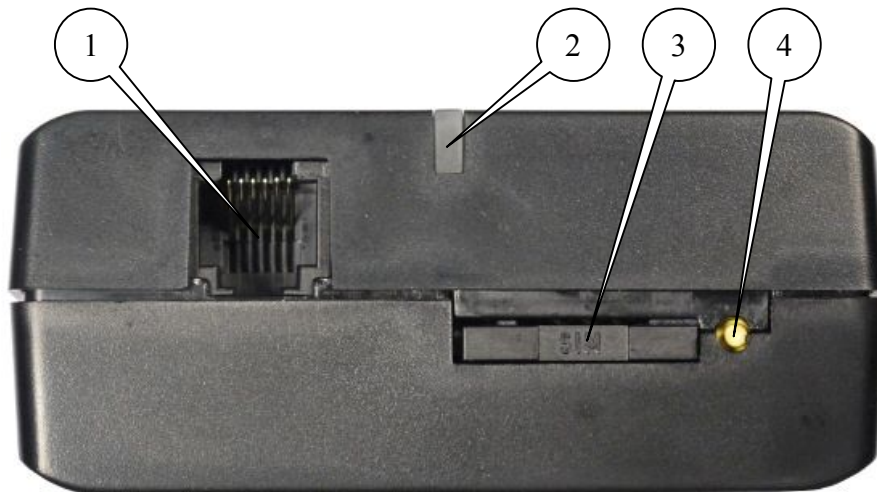


Fig.2.4.1 Front view.



Fig.2.4.2 Back view.

On the figures the digits signify the following:

1. connector RJ11 for audio interface connection,
2. network LED indicator,
3. SIM card tray,
4. SIM card tray extracting button,
5. connector DB9 for connection of the data cable RS232,
6. connector RJ11 for power supply connection
7. connector FME for GSM antenna connection.

3.4. Interfaces

3.5.1. Connector DB9 (RS232)

The connector is used for connection to the control device, exchange protocol RS232.

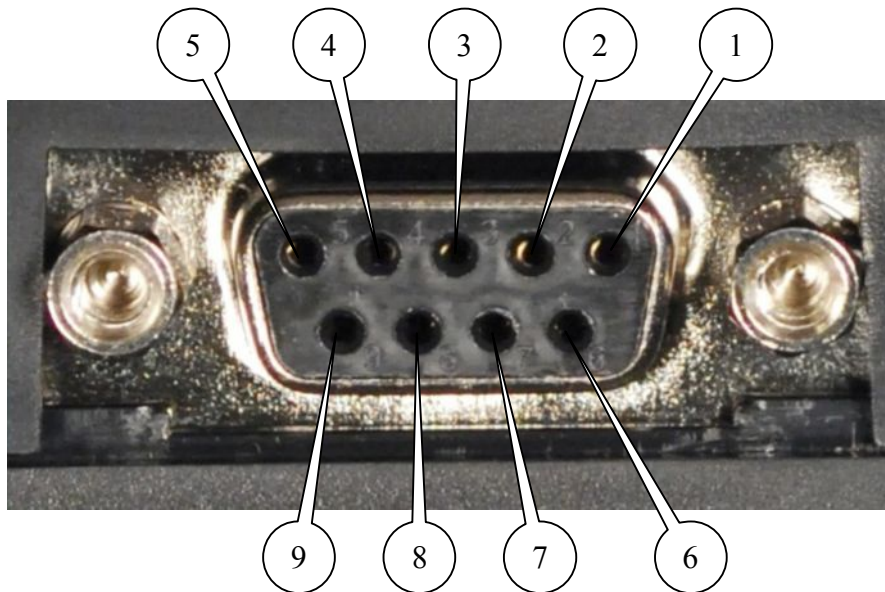


Fig.2.5.1 Connector DB9

Table 2.5.1 Purpose of the connector pins.

| Pin | Signal | Direction | Purpose |
|-----|--------|-----------|-------------------------------|
| 1 | DCD | Modem-PC | Availability of carrier wave |
| 2 | RXD | Modem-PC | Data reception |
| 3 | TXD | PC-Modem | Data transmission |
| 4 | DTR | PC-Modem | Availability of data receiver |
| 5 | GND | general | System housing |
| 6 | DSR | Modem-PC | Readiness of data |
| 7 | RTS | PC-Modem | Request for transmission |
| 8 | CTS | Modem-PC | Availability of transmission |
| 9 | RI | Modem-PC | Call signal |

3.5.2. Power supply connector RJ11

The connector is used for connection of electric power supply.

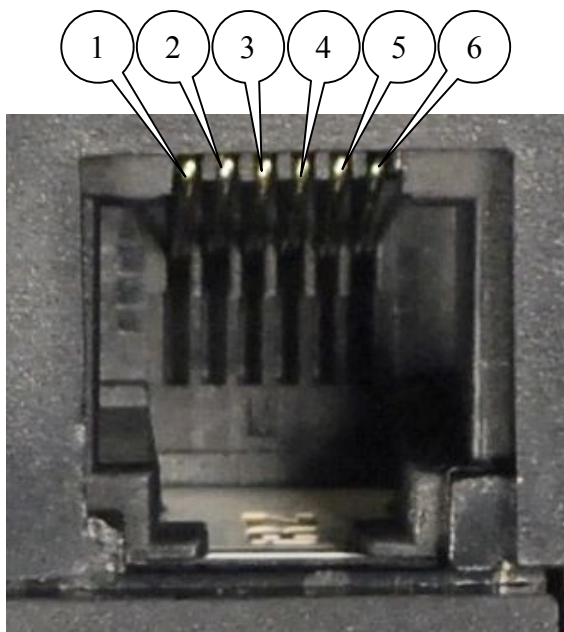


Fig.2.5.2 Connector RJ11

Table 2.5.2 Purpose of power supply connector pins.

| Contact | Signal | Purpose |
|---------|----------|---|
| 1 | + 12V | Positive pole of DC supply voltage. Protected with a fuse and the protection circuit against voltage-surge (with voltage infeed rate more than 30V) and incorrect polarity. |
| 2 | not used | |
| 3 | not used | |
| 4 | not used | |
| 5 | not used | |
| 6 | GND | System housing |

3.5.3. Audio Interface Connector RJ11

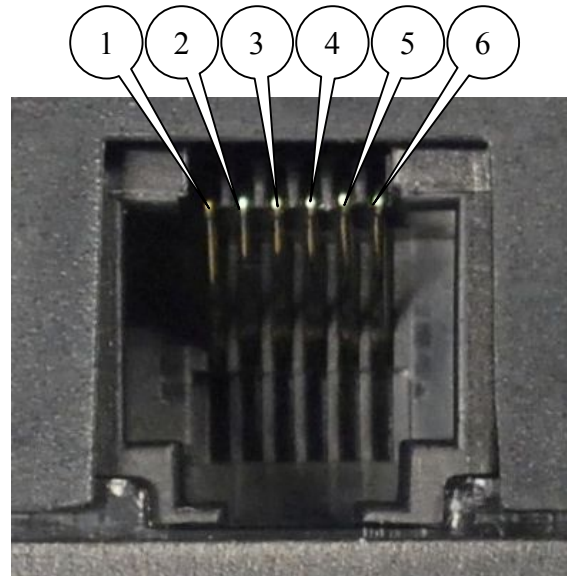


Fig.2.5.3 Connector RJ11

Table 2.5.2 Purpose of the power supply connector pins.

| Contact | Signal | Purpose |
|---------|----------|--|
| 1 | not used | |
| 2 | MICP | microphone input and microphone power supply not inverse |
| 3 | SPKP | phone output not inverse |
| 4 | SPKN | phone output inverse |
| 5 | MICN | phone input inverse |
| 6 | not used | |

3.5. Modem Status Indication

LED indication is provided in the modem for connection status indication.

Table 2.6.1 Connection status indication

| Indication mode | Operation mode |
|---|--|
| Turned off | Modem is turned off or there is an emergency situation |
| 600 ms on / 600 ms off | Modem is not registered in the network |
| 75 ms on / 3 s off | Modem is registered in the network |
| 75 ms on / 75 ms off / 75 ms on / 3 s off | GPRS connection is installed |
| 500 ms on / 50 ms off | Data transmission is underway |

3. Connection and Setting Up

3.1. Connection

Before feeding the power supply you need to install the SIM card in the modem (the SIM card must be enabled). To do this, you need:

- to extract the SIM tray by pressing the SIM tray extract button (Fig. 2.4.1);
- to install the SIM card into the SIM tray;
- to insert the SIM tray with the SIM card into the modem.

No strong physical efforts must be applied while installing the SIM card.

Connect the GSM antenna to the antenna connector, as well as the commutating cable (RS232). Feed power supply to the modem through the connector RJ11 (Fig. 2.4.2).

Note: GSM antenna, data cables and electrical power unit are not included in the complete set configuration.

After the power supply feeding, registration occurs automatically, which is signaled by the green indicator frequent flashing. After the registration is completed, the modem jumps to the operating mode, the green indicator flashes less frequently (Table 2.6.1).

3.2. Control, Restarting and Power Off

The modem control is performed by standard AT commands. For additional information and support visit the manufacturer's site – www.radiofid.ru.

Modem restarting can be carried out by the following ways:

- by the program method through AT commands,
- by eight jumpings of the DTR COM port line into passive state ($DTR < 3V$), duration of pulses and the pauses between the pulses must lie within the range 100-500 ms,
- by temporary power-off.

The modem can be powered off using the following ways:

- by the program method, using AT commands (escape to the power standby mode);
- directly by power-off.

After power-off made by means of AT commands, the modem escapes to the power standby mode (minimum power consumption). Escaping from the power standby mode is performed upon the DTR of the COM port.